



## **VM E-mount Adapter II**

INSTRUCTION MANUAL

Voigtländer mount adapters are designed to be used with Voigtländer lenses on various types of camera mounts.

## Tips for care and safety

These tips are to protect the user from injury or damaging the product.



**WARNING**

If the user ignores this warning sign and uses the equipment the wrong way serious injuries and even death may be the result.



**CAUTION**

If the user ignores this caution sign it might result in injuries and damage the equipment.

---



**CAUTION**

Keep the mount adapter and its accessories out of reach of children.



**CAUTION**

Do not leave the product in hot or cold temperatures. It might result in injuries and also damage the product.



**CAUTION**

Do not let the mount adapter ring support the whole weight of lens and camera. When using big and heavy lens, hold both camera and lens while in operation or transportation.


---

Never touch the inside of the mount adapter. In case it is dirty or dusty use blower or soft brush.

## Description of Parts

---

- ① Release button
- ② Lens mount index
- ③ Camera mount index

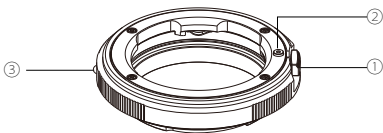

## ● About the VM E-mount Adapter II

This adapter is manufactured for the purpose of attaching Voigtländer VM mount, Carl Zeiss ZM mount and Voigtländer L mount (with optional M/L adapter ring) to E-mount camera. Please note that the warranty is void when the lens except listed above is attached and cause damage or malfunction of camera/adapter/lens. Any claims or damages due to improper use of the adapter, which it was not designed for, are not covered by the warranty. For detail, please refer to the list of confirmed adaptable lenses. Depending on the combination of camera body and lens used, low resolution of the edge of the picture or color cast may occur.



The list of checked lenses.

<https://www.cosina.co.jp/voigtlander/en/accessories/vm-e-mount-adapter-ii/>

## ● Attaching the Adapter

Attaching the adapter to the camera body : Align the camera mount index ③ and lens index on camera body, then turn the adapter clockwise until it locks.

Attaching the lens to the adapter ring : Align the lens mount index ② and index on the lens, then turn the lens clockwise until it locks.

## ● Removing the Lens

Removing the lens from the adapter ring : While pressing the release button ① , turn the lens counter-clockwise until it is released.

Removing the adapter from the camera body : While pressing lens release button on the camera body, turn the adapter counter-clockwise until it is released.

## ● Specifications

Product Name	VM E-mount Adapter II
Covered Image Size	Full Frame
Maximum Diameter	Approx. Ø62.0mm
Weight	Approx. Ø62g

\* Specification and information is subject to change without prior notice.